


K45-ELR管状电机X-NMS-说明书


公司保留更改产品设计与说明书的权利，届时将不另行通知，图片仅供参考，具体以实物为准。A/2 H12218

对码：电机通电自动进入对码，5秒后超时，电机无任何提示。


消码：清除电机上所有接收储存发射器的记忆，其它设置不会改变或清除。

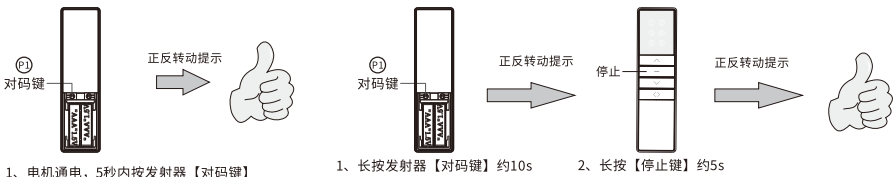

遇阻功能：默认开启，重复操作是打开和关闭相互切换。

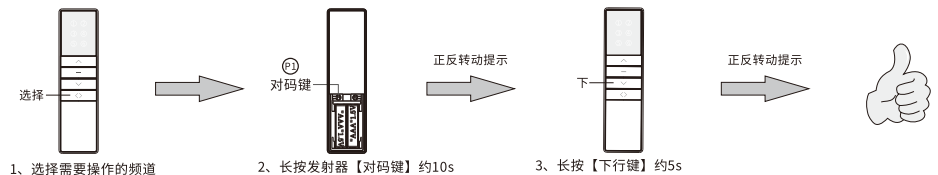

遇阻反弹/遇阻停止互换：默认开启遇阻反弹模式，重复操作是遇阻反弹与遇阻停止相互切换。(默认反弹约30cm，切换后遇阻停止不反弹)

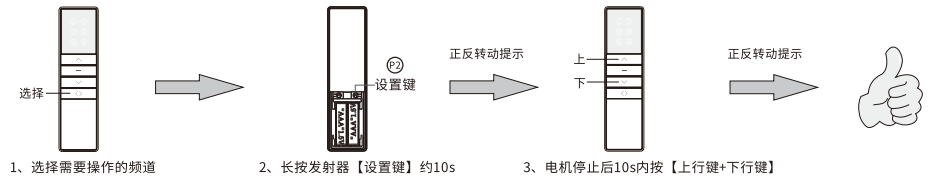

点动/连动模式互换：电机出厂默认为连动模式，切换为点动模式后，长按住【上行键】或【下行键】约2s电机一直连动运转。




轻抬上升/下降：电机出厂默认关闭，开启后，窗帘在离上限位10厘米之内轻抬，电机下降；否则在其他位置轻抬，电机上升。




面料修复：电机出厂默认关闭，开启后，当电机正常下降并停止时，电机反上升一点距离，修复面料褶皱。






复制：为已经对码的电机新增加一个B发射器。

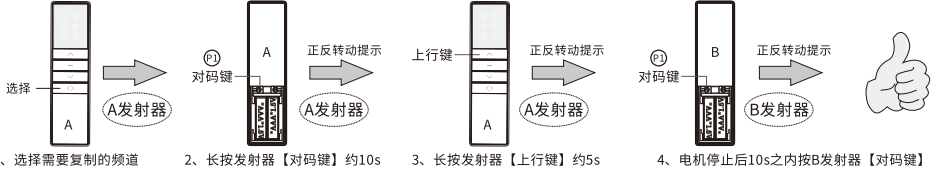



换向：切换已对上码电机运转方向。如：换向前，按发射器上行键，窗帘往下运行；换向后，按发射器上行键，窗帘往上运行。

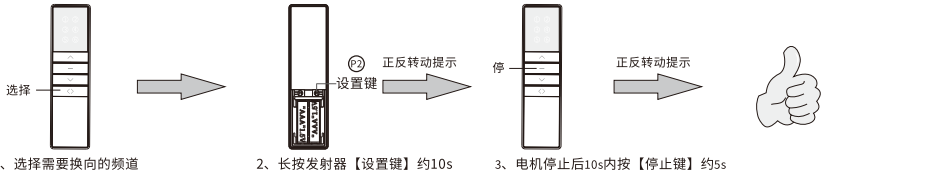


上限位/下限位设置：指按发射器【上行键或下行键】时,窗帘向上/向下运行,所能到达的理想最高/最低位置。

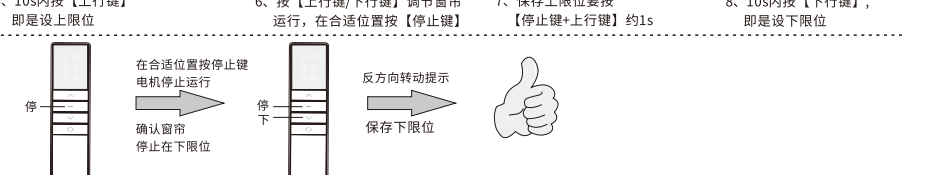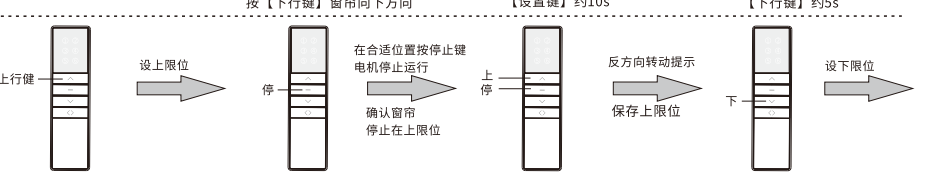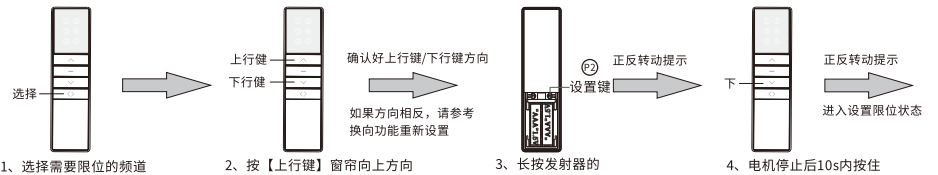


第三行程设置：窗帘运行到第三行程，重复操作可删除第三行程。

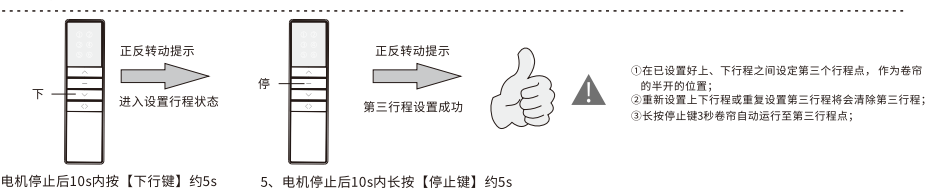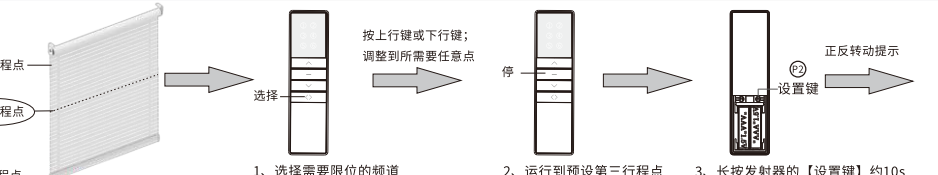

配网重置方法：

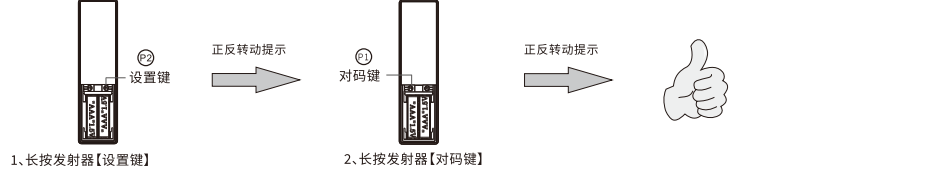

APP配网方法：

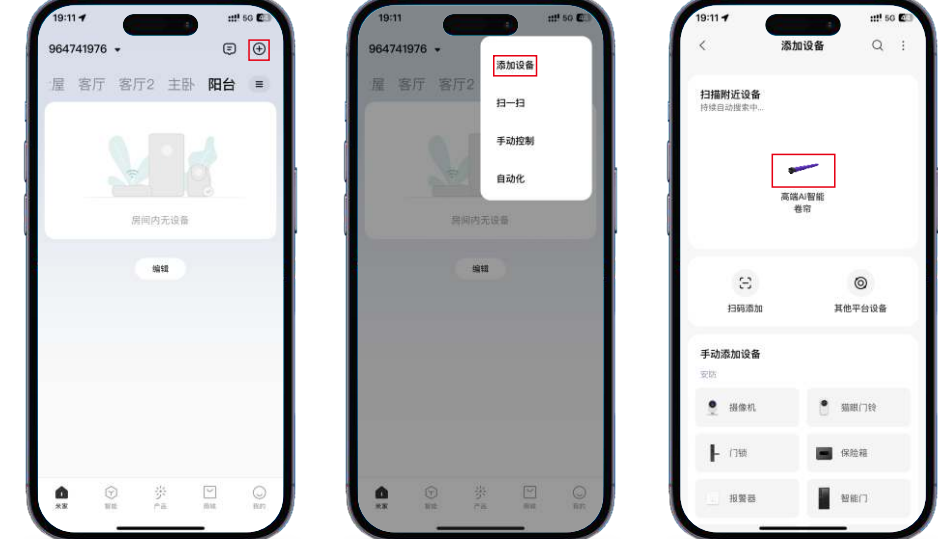

01.打开米家APP，选择右上角的“+”

02.选择“添加设备”

03.出现电机图标后，点击进行配对



04.等待设备连接

05.添加成功，点击完成


06.最终操作界面如上图所示

K45-ELR Tubular Motor-NMS Operating Manual






Company reserves the right to change product design and specifications without prior notice then, photos are for reference only. H12218 A/2

Pairing method: Motor enters pairing mode when powered on, and exits after 5s (no any prompts).




Clear pairing : Clear all pairing on the motor:

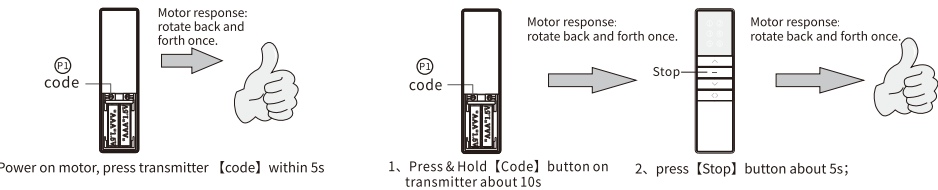


Resistance function: enabled by default. Repeated operation is to open or close this function.

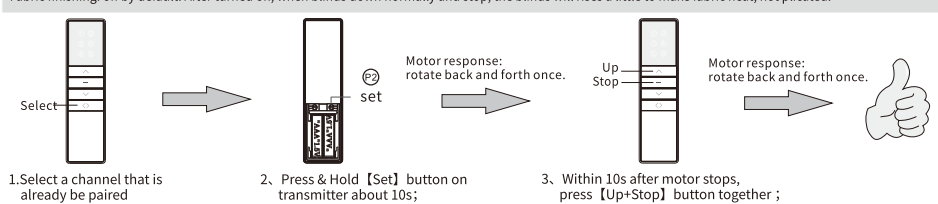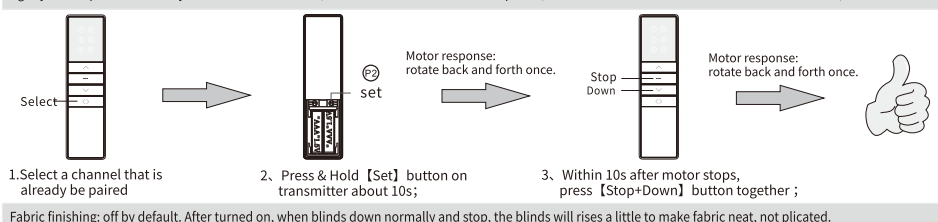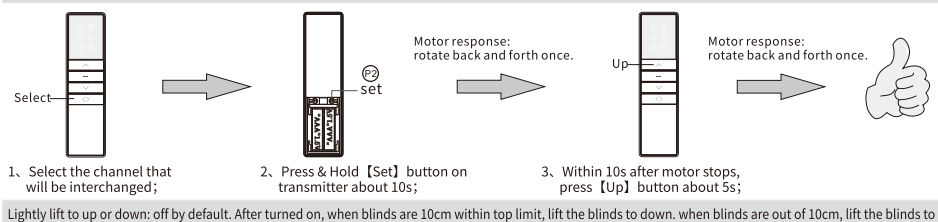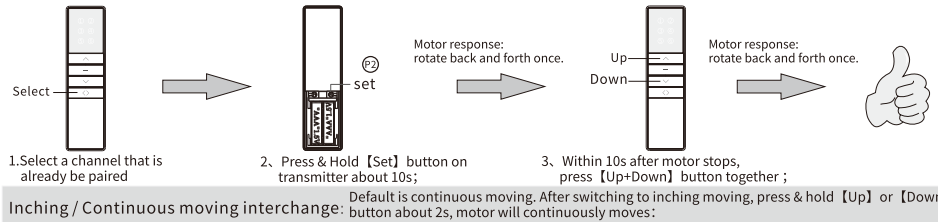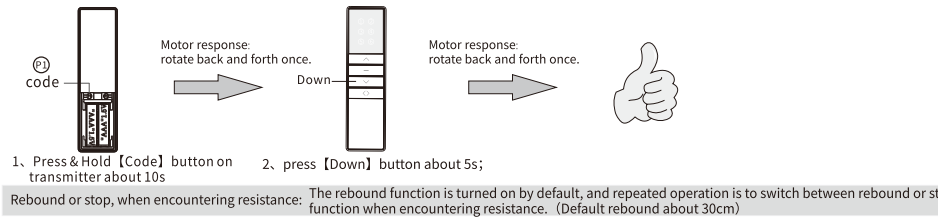


Copy: Add a new channel to control motor. (No need to touch motor):

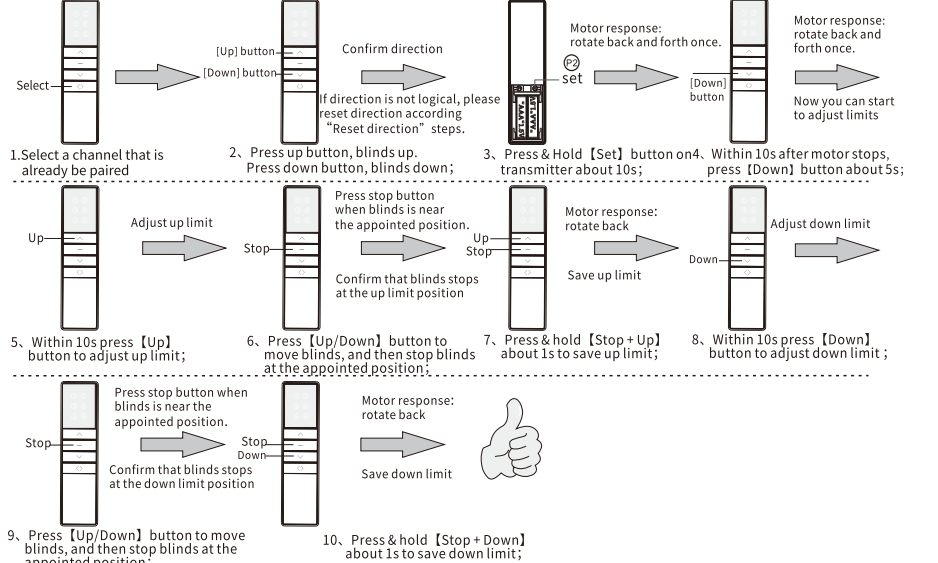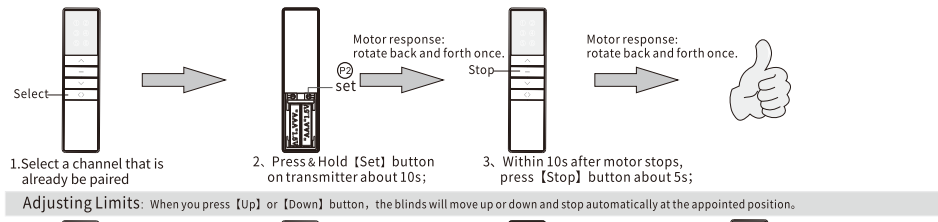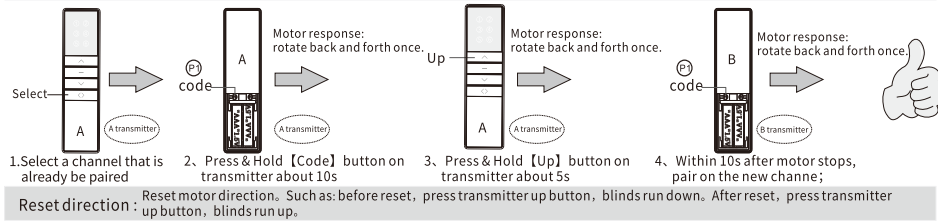

Adjust the third limit : Repeat the operation once to eliminate the third limit :

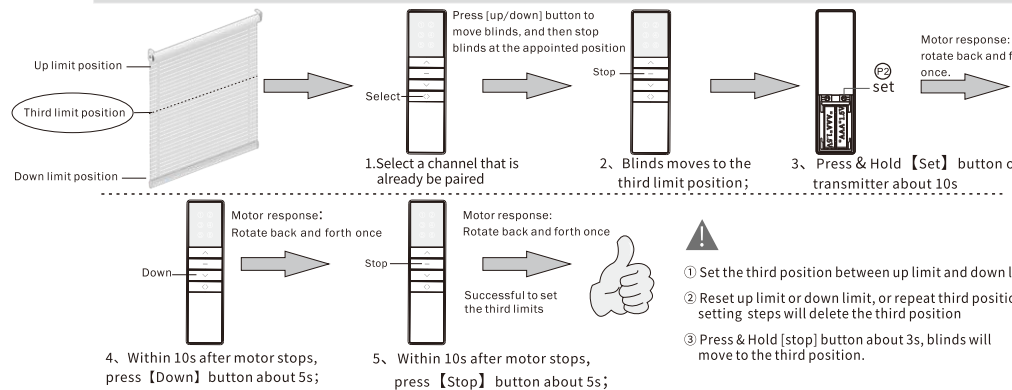

Reset Wi-Fi:

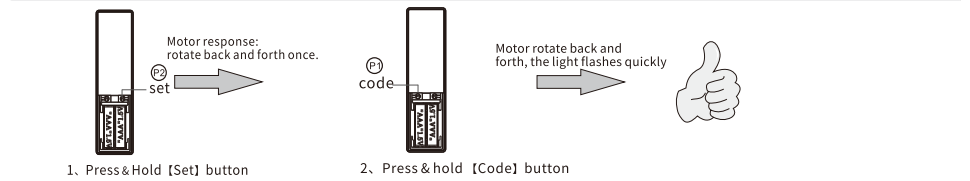

Configure network method:

