

A9系列AC-24V接收器说明书

公司保留更改产品设计与说明书的权利，届时将不另行通知，图片仅供参考，具体以实物为准。

A/1 H12063


产品特性

A9系列接收器通过868MHz的无线射频传送，接收距离可达100米以上(可视)，穿隔两面加固混凝土墙至少30米。868MHz频率在无线通信中有抗干扰能力强、接收灵敏度高、中心频率稳定、调试方便等特点。

编号	产品名称	规格	输入电压(v)	输出路数	功率(w)	输出电压(v)	尺寸	工作温度
D33070	A9单路AC-24-2接收器	白色	AC100-240	单路	48	DC24	86x86mm	-20°C ~ +60°C
D33071	A9双路AC-24-1接收器	白色	AC100-240	双路	24x2	DC24	86x86mm	-20°C ~ +60°C


安装示意图 (最佳安装高度: 150cm)

- 1、请勿使接收器接触金属物体(接触会影响无线电波的传播)
- 2、接收器与地面之间的最短距离: 150cm;
- 3、接收器与屋顶之间的最短距离: 30cm;
- 4、接收器与发射器之间的最短距离: 30cm;
- 5、两个接收器之间的最短距离: 20cm。

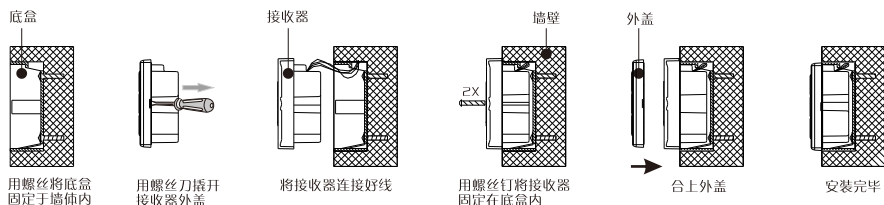


AC-24V接收器接线、尺寸示意图


A9单路AC-24-2接收器

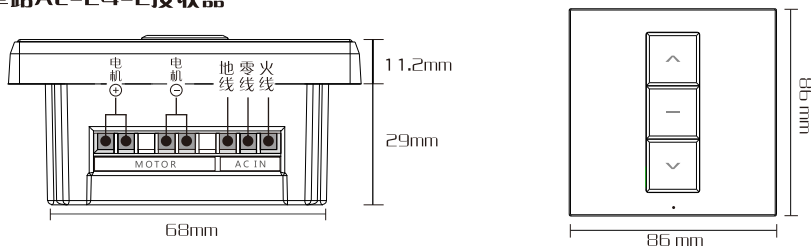

A9双路AC-24-1接收器

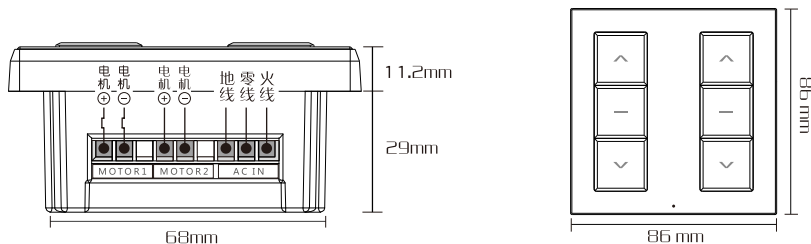


接收器和发射器面板按键说明

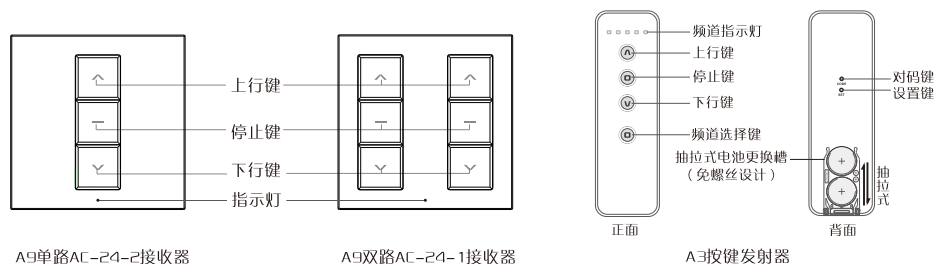


操作说明 (*以A3按键发射器为例进行说明，其它发射器请参考相应的发射器说明书。)

对码: 重复操作对码步骤即是消除当前码。接收器必须与发射器对码才可以遥控操作:

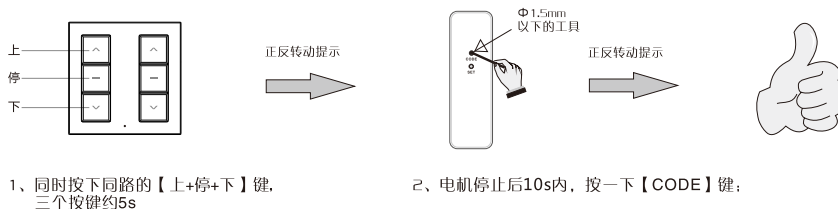


消码: 取消全部发射器与接收器配对。

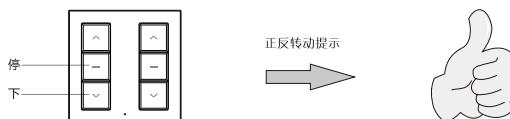


1、同时按下同路的【停+下】键约5s;

点动/连动模式互换: 电机出厂默认认为连动模式, 切换为点动模式后, 长按住【上行键】或【下行键】约2s电机就一直连动运转:

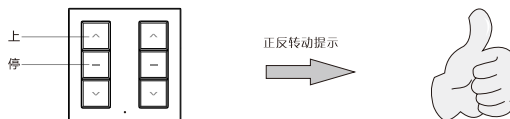

1、同时按下同路的【上+停】键约5s;

换向: 更换运转方向。如: 换向前, 按发射器上行键, 窗帘往下运行; 换向后, 按发射器上行键, 窗帘往上运行。

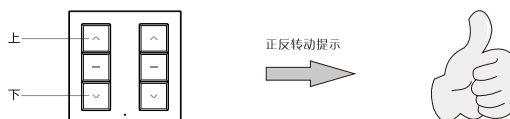

1、同时按下同路的【上+下】键约5s;

A9 Series AC-24V Receiver Manual

Company reserves the right to change product design and specifications without prior notice then , photos are for reference only.

A/1 H12063


Product Features

A9 Receiver use 868 MHz radio frequency ,Receive distance is above 100m(visual range), two reinforced concrete wall at least 30 m. 868 MHz radio frequency with a strong anti-jamming capability, high receiving sensitivity, stable center frequency and convenient debugging, etc function in wireless communications.

Item NO	Item	Specifications	Input voltage (v)	output channels	Power (w)	Output voltage (v)	Size	Working temperature
D33070	A9 Single channel AC-24V-2A receiver	White	AC100-240	Single Channel	48	DC24	86x86mm	-20°C ~ +60°C
D33071	A9 Double channel AC-24V-1A receiver	White	AC100-240	Double Channel	24x2	DC24	86x86mm	-20°C ~ +60°C


Install Sketch Map

- 1.Can not bring receiver into contact with metal object (otherwise will influence radio transmit)
- 2.Shortest distance between receiver with ground: 150cm
- 3.Shortest distance between receiver with roof: 30cm
- 4.Shortest distance between receiver with transmitter: 30cm
- 5.Shortest distance between 2 receivers: 20cm

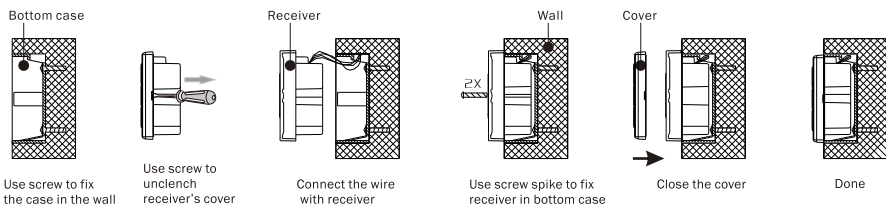


AC-24V Receiver Wire, Dimension Diagram


A9 Single channel AC-24V-2A receiver

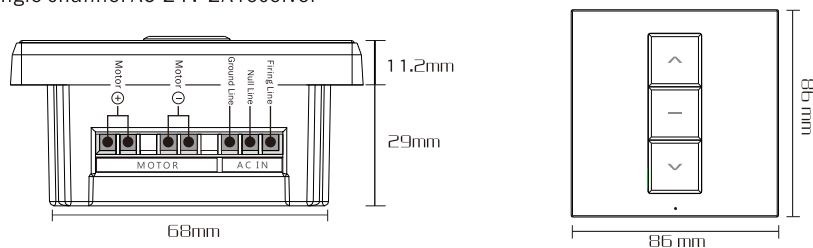

A9 Double channel AC-24V-1A receiver

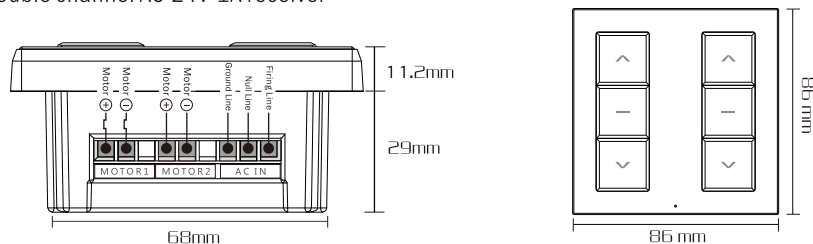


Receiver and transmitter key press instruction

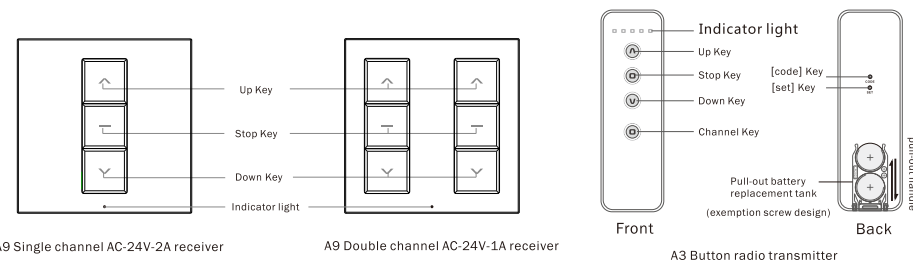


Instructions (*Take A3 button transmitter as an example, For other transmitters, please refer to the corresponding transmitter manual.)


Pairing transmitter and motor : Repeat the pairing operation once to eliminate the current pairing. Match transmitter with receiver (motor) which is necessary that the receiver can be remote controlled after matching code with transmitter.:

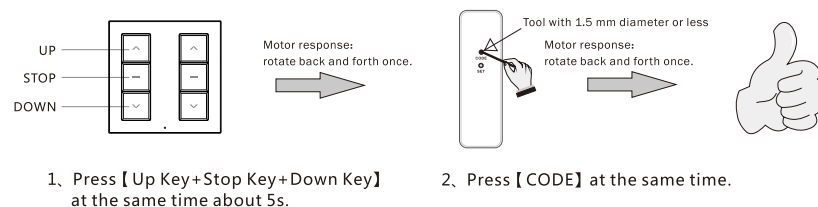

Clear pairing : Cancel all match code between transmitter and receiver.

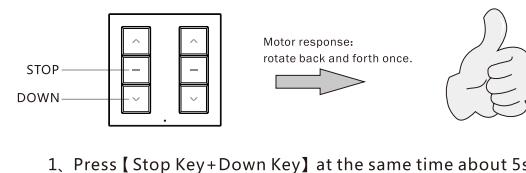

Inching / Continuous moving interchange : Default is continuous moving. After switching to inching moving, press & hold [Up] or [Down] button about 2s, motor will continuously moves:

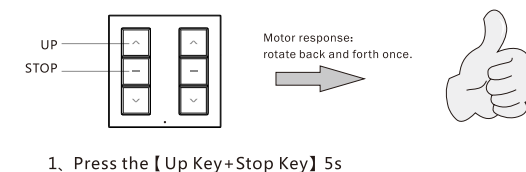

Reset direction : Reset motor direction. Such as: before reset, press transmitter up button, blinds run down. After reset, press transmitter up button, blinds run up.

