


K25-4E 管状电机使用说明书

公司保留更改产品设计与说明书的权利, 届时将不另行通知, 图片仅供参考, 具体以实物为准。 H12033 A/8


电动卷帘机构图 注: 带“*”号的是非电机标配部件 (可订制零件)

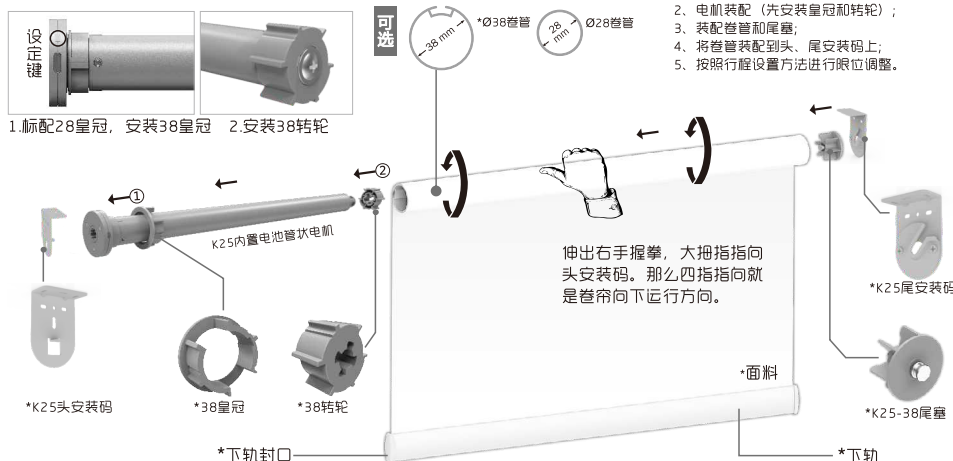


注: 本产品不支持手拉功能; 另外请使用带有“*”图标或者L标签的专用发射器。
如果产品长期不用, 需要充满电, 然后每隔12个月再次充满电以保持电池健康。

操作说明 (*以A13按键发射器为例进行说明, 其它发射器请参考相应的发射器说明书。)


对码: 重复操作对码步骤即是消除当前码。一台电机最多存5个遥控码, 再增加遥控器只会覆盖第一个:

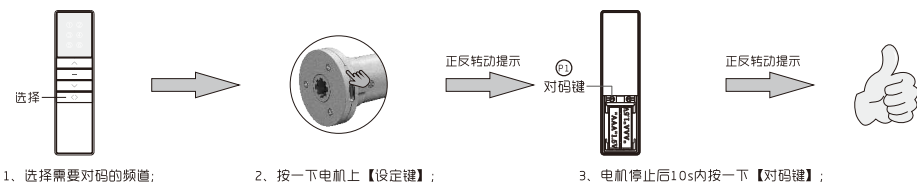

消码: 清除电机上所有接收存储发射器的记忆, 其它设置不会改变或清除:

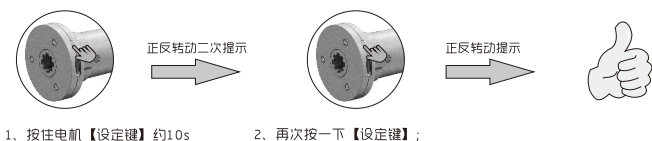

点动/连动模式互换: 电机出厂默认为连动模式, 切换为点动模式后, 长按住【上行键】或【下行键】约2s电机合一直连动运转:

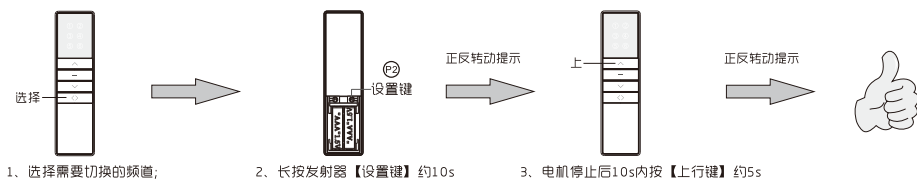


复制: 为已经对码的电机新增一个B发射器:




1. 选择需要复制的频率;
2. 长按发射器【对码键】约10s
3. 电机停止后10s内按B发射器【对码键】

换向: 切换已对上码电机运转方向。如: 换向前, 按发射器上行键, 窗帘往下运行; 换向后, 按发射器上行键, 窗帘往上运行:

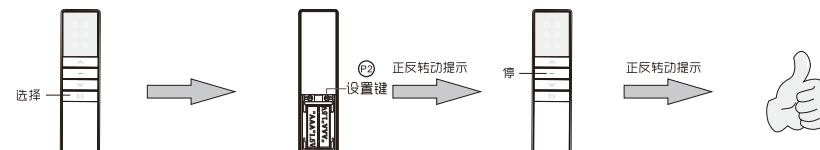


1. 选择需要换向的频率;
2. 长按发射器【设置键】约10s
3. 电机停止后10s内按【停止键】约5s

上限位/下限位设置: 指按发射器【上行键或下行键】时, 窗帘向上/向下运行所能到达的理想最高/最低位置

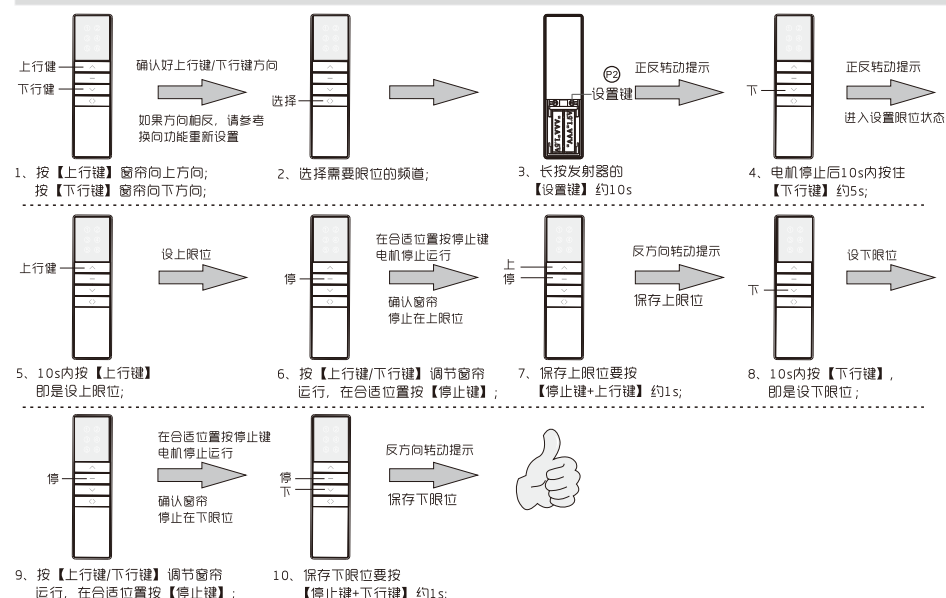


第三行程设置: 重复操作设置将会取消第三行程点:

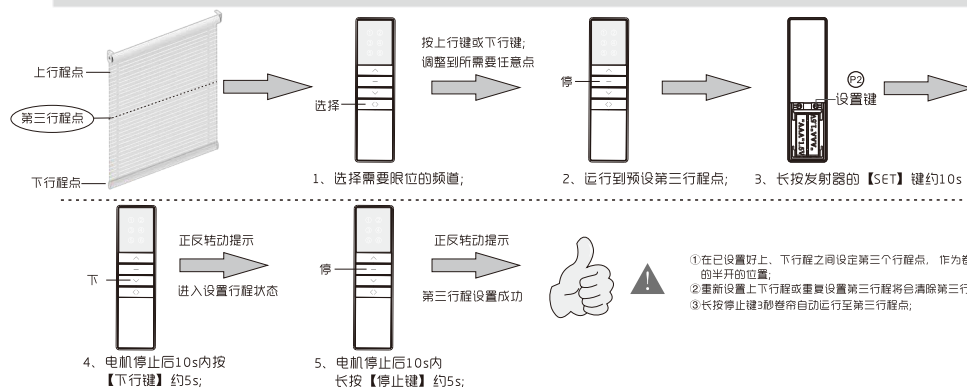

K25-4E Tubular Motor Operating Manual

Company reserves the right to change product design and specifications without prior notice then, photos are for reference only. H12033 A/8

E Electric roller blind draft (If the accessory with "*" that mean could be OEM)

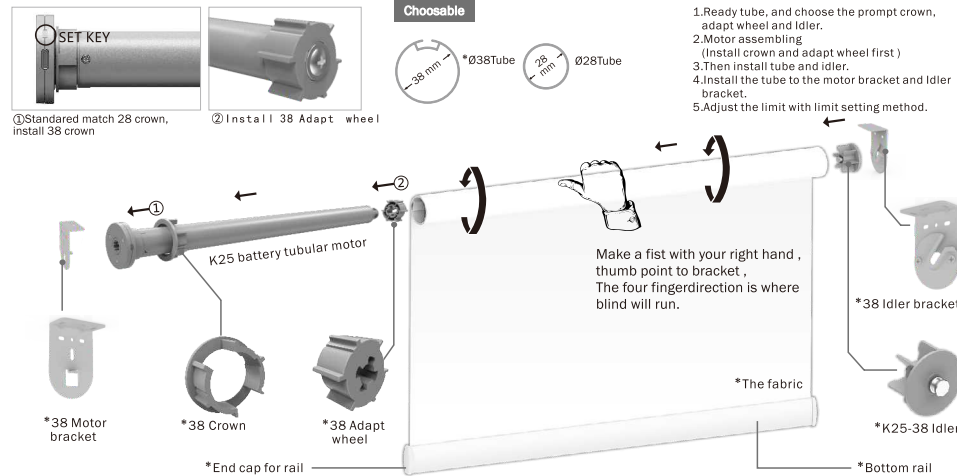


Note: This product does not support hand-pull function; Also use a dedicated transmitter with a "P" icon or an L-tag. Fully charge the product when not in use, and then recharge it every 12 months.


T Transmitter operating instructions

(*Take A13 button transmitter as an example, For other transmitters, please refer to the corresponding transmitter manual.)


Pairing transmitter and motor: Repeat the code pairing step to eliminate the current code. One motor can store up to 5 channels, adding a new channel will only cover the first channel.

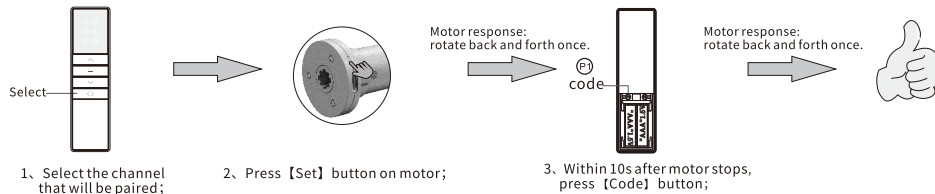


Clear pairing : Clear all pairing on the motor:

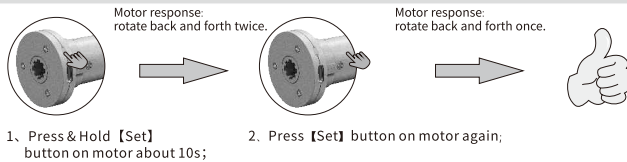


Inching / Continuous moving interchange: Default is continuous moving. After switching to inching moving, press & hold [Up] or [Down] button about 2s, motor will continuously moves:

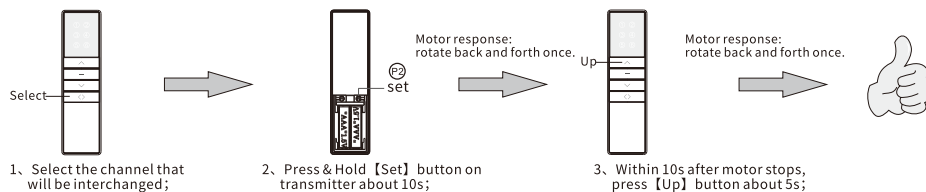


Copy: Add a new channel to control motor. (No need to touch motor):

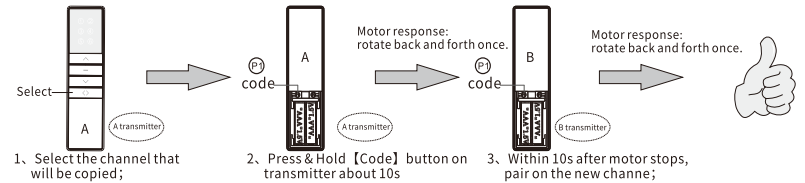


Reset direction : Reset motor direction. Such as: before reset, press transmitter up button, blinds run down. After reset, press transmitter up button, blinds run up.

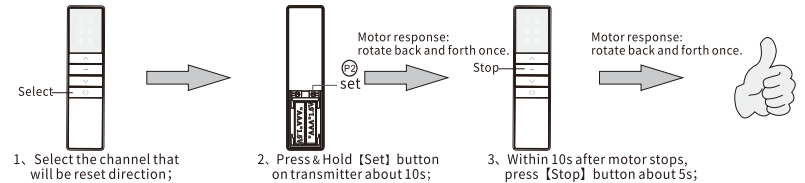

Adjusting Limits: When you press [Up] or [Down] button, the blinds will move up or down and stop automatically at the appointed position.

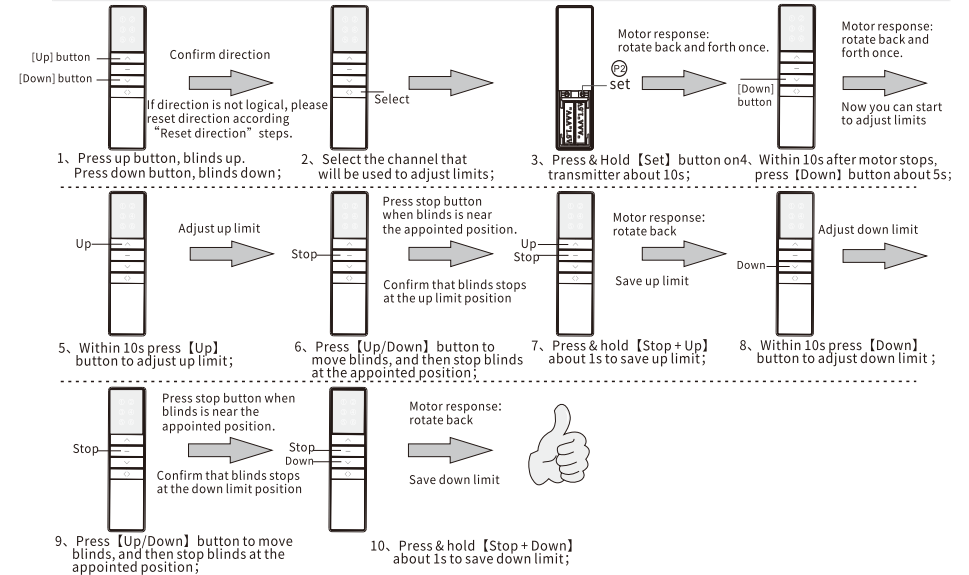

Adjust the third limit : Repeat the operation once to eliminate the third limit.

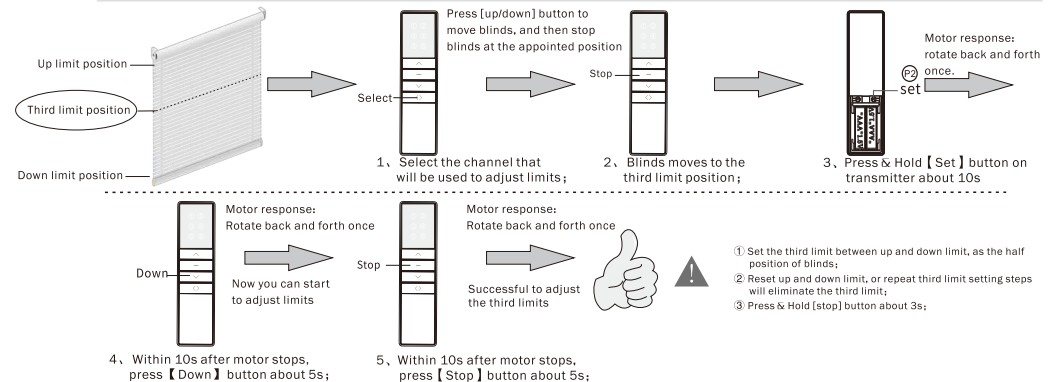

- 1) Set the third limit between up and down limit, as the half position of blinds;
- 2) Reset up and down limit, or repeat third limit setting steps will eliminate the third limit;
- 3) Press & Hold [stop] button about 3s;