

L9 Folding Skylight Specification

SKYLIGHT MOTOR & TRACK SYSTEM Manual



S Skylight Specification (N19 Skylight Motor & Track System)

Motorized skylight system can not only solve a series of problems such as solar radiation , heat, but also can create a convenient sweet and comfortable environment.

We advocate green environmental protection idea , and in order to make our motors life more durable , we have made special research and development for the energy saving , safety and environmental protection.

P Parameter table


Item NO.	Input vol. 100-240V	dry contact	Soft start and Soft stop	Stop by resistance	Automatic Limit	Constant speed synchronization	Adjustable speed
N30089	●	●	●	●	●	●	●

Item NO.	Item	Torque (N.m)	Power (w)	Speed (cm/s)	Rated revolution (rpm)	Working voltage (v)	Receiving frequency (MHz)	Motor length (mm)	Motor weight (kg)
N30089	N19-3E-2S kylight curtain Motor	2	48	10-20	80-120	AC100-240	868	322	1.27

P Problems And Solutions


Problems	Possible reasons	Solutions
Press the transmitter, but the motor doesn't work.	1. There is no power 2. the battery inside the transmitter have no power 3. the remote control is over the maximum distance which the transmitter can control the motor	1. Check the electronic supply 2. Renew the battery inside the transmitter 3. Move the transmitter closer to the motor
Motor work, but the master carrier don't work.	Gear of drive unit wears and slips.	Replace drive unit
The motor can't stop working	The belt is too loose and other problems.	Please contact technicians
The curtain open and close , but very slowly.	1. The fabric is too long on the floor; 2. The fabric is over weight.	1. Adjust the fabric length 2. Adjust the fabric weight
Abnormal noise during the motor working	Motor is no loading running or Sundries in the track	Check the track and clean it up
The motor move in opposite directions as the transmitter showing	Not a problem	Change the move direction setting

Installation Instruction (Units : mm)

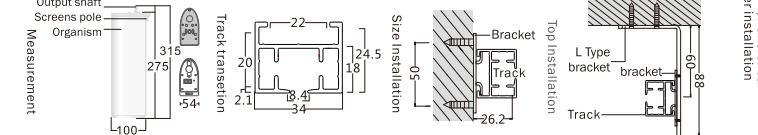


Please read the instruction carefully before installation, and install the product according to the instruction strictly.
Company reserves the right to change product design and specifications without prior notice then, photos are for reference only.



Honey comb Skylight Motor Organization Ch

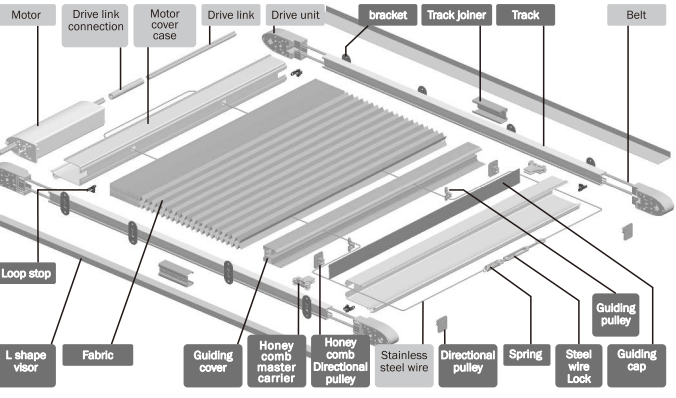


Honeycomb Skylight Material Size Processing

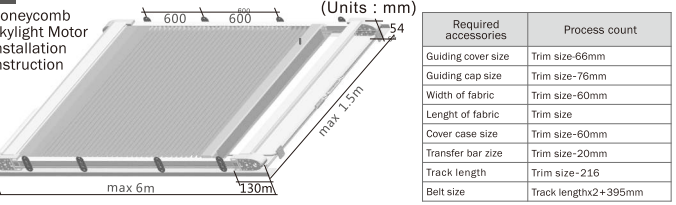


Honey comb Skylight Installation Manual

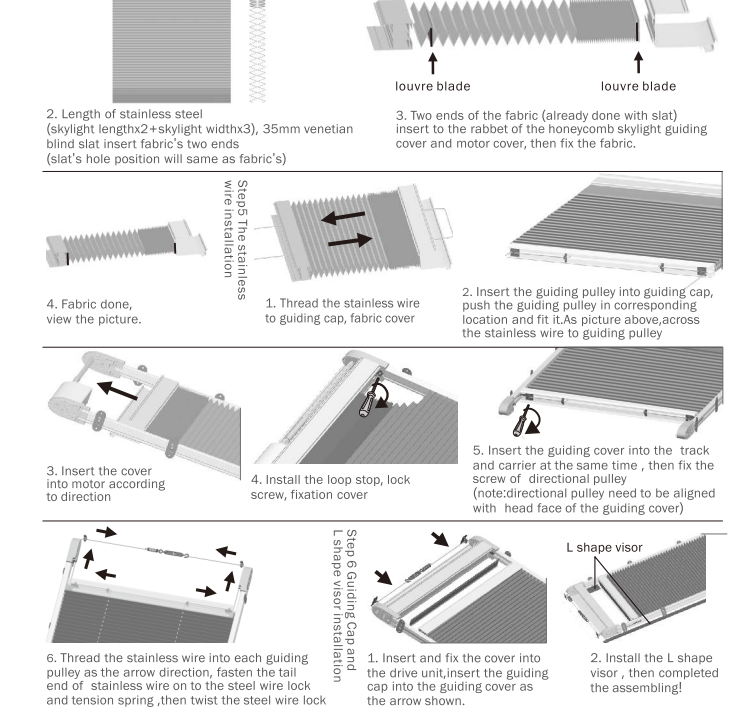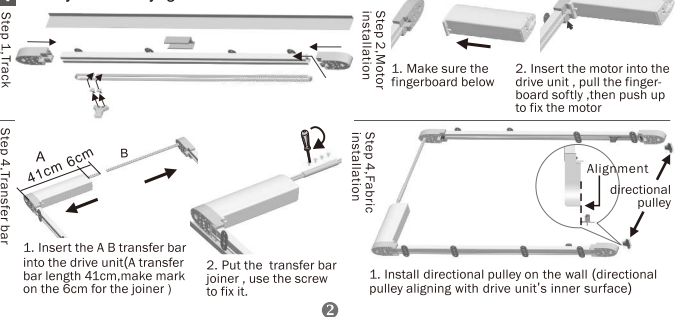


H Honey comb skylight Motor apply mode

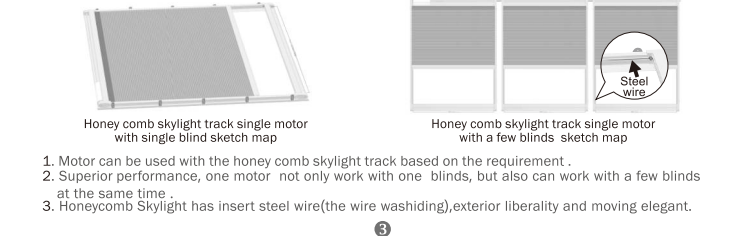



F Folding Skylight Motor Organization C

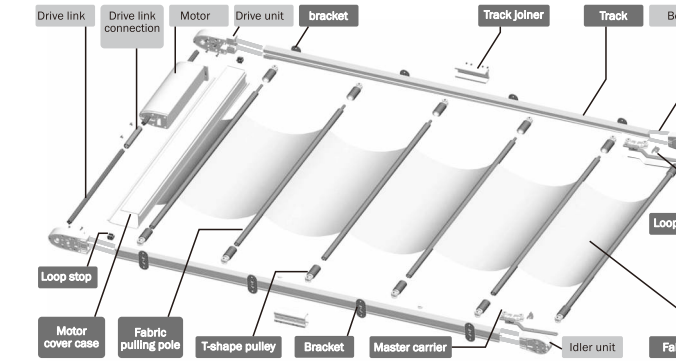


Folding Skylight Material Size Process

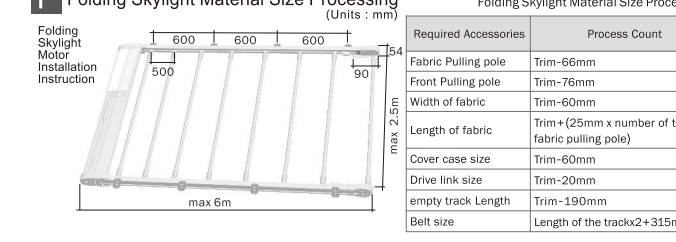

Folding Skylight Installation Manual

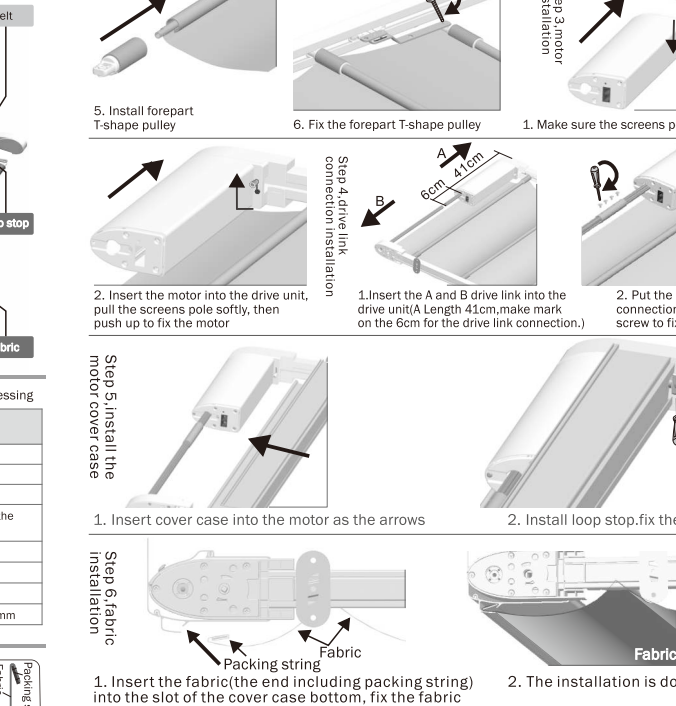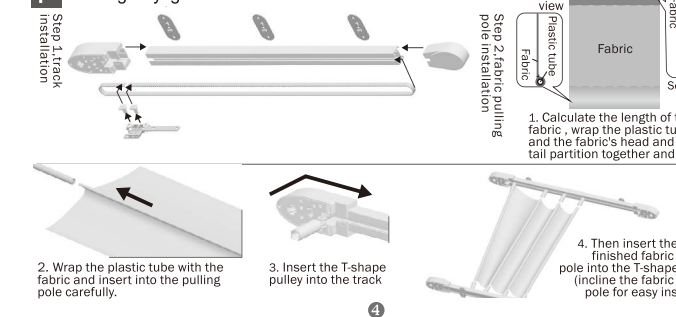


F Folding skylight Motor apply mod

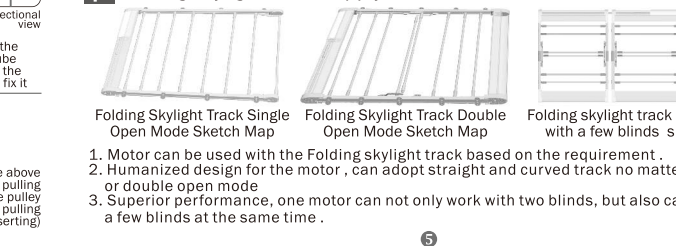


C Common accessory



e cover case

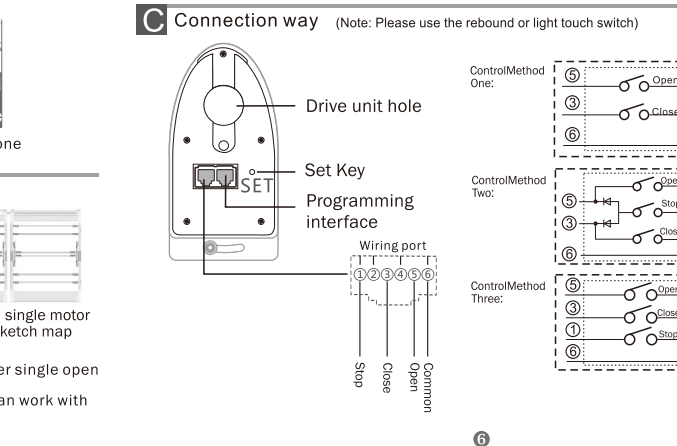

I Instruct

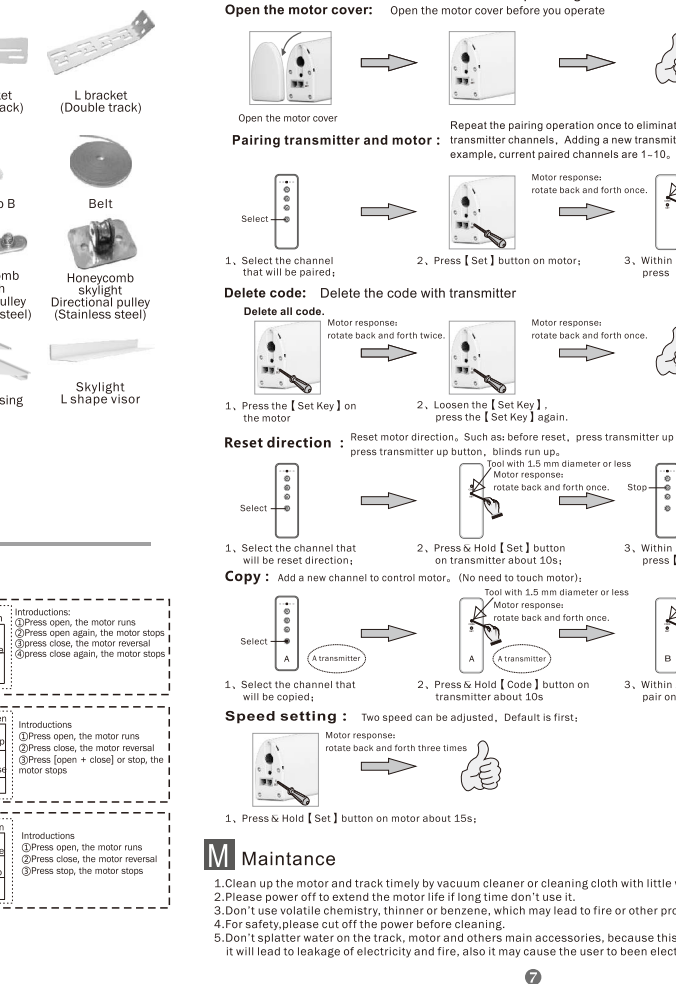

① Press open, the motor runs
② Press close, the motor reversal
③ Press stop, the motor stops

1. Clean up the motor and track timely by vacuum cleaner or cleaning cloth with little water.
2. Please power off to extend the motor life if long time don't use it.
3. Don't use volatile chemistry, thinner or benzene, which may lead to fire or other problems.
4. For safety, please cut off the power before cleaning.
5. Don't splatter water on the track, motor and others main accessories, because this will lead to leakage of electricity and fire, also it may cause the user to be electric shock.