


K45-3ER管状电机说明书-NTY

公司保留更改产品设计与说明书的权利，届时将不另行通知，图片仅供参考，具体以实物为准。 A/O H12357


对码：电机通电自动进入对码，5秒后超时，电机无任何提示。

消码：清除电机上所有接收储存发射器的记忆，其它设置不会改变或清除。

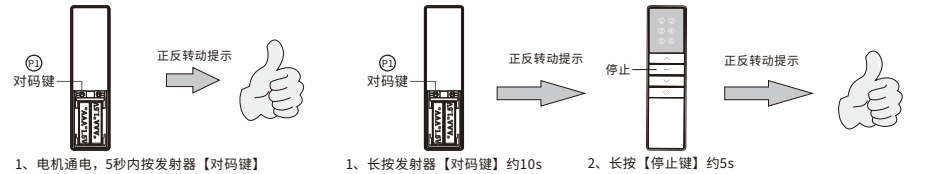


- 1、电机通电，5秒内按发射器【对码键】
- 1、长按发射器【对码键】约10s
- 2、长按【停止键】约5s

遇阻功能：默认开启，重复操作是打开和关闭相互切换。

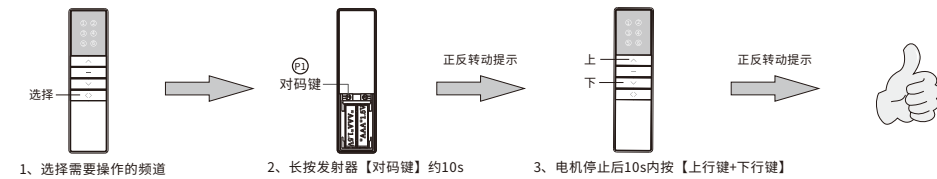


- 1、选择需要操作的频道
- 2、长按发射器【对码键】约10s
- 3、电机停止后10s内按【上行键+下行键】

遇阻反弹/遇阻停止互换：默认开启遇阻反弹模式，重复操作是遇阻反弹与遇阻停止相互切换。(默认反弹约30cm，切换后遇阻停止不反弹)

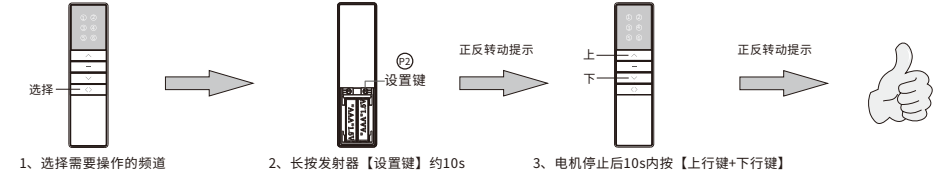


- 1、选择需要操作的频道
- 2、长按发射器【设置键】约10s
- 3、电机停止后10s内按【上行键+下行键】

点动/联动模式互换：电机出厂默认为联动模式，切换为点动模式后，长按住【上行键】或【下行键】约2s电机一直运动运转。

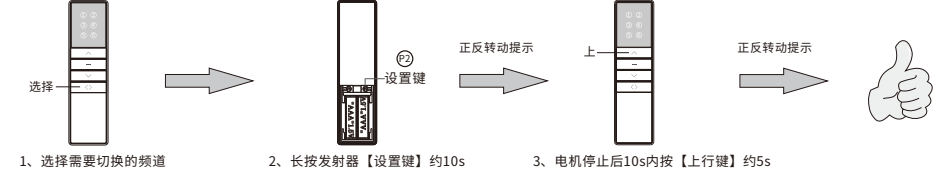


- 1、选择需要操作的频道
- 2、长按发射器【设置键】约10s
- 3、电机停止后10s内按【上行键】约5s

面料修复：电机出厂默认关闭，开启后，当电机正常下降并停止时，电机反向上升一点距离，修复面料褶皱。

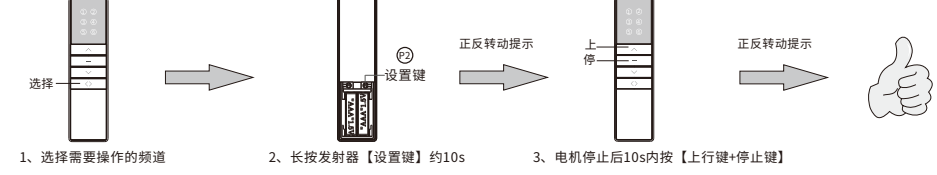


- 1、选择需要操作的频道
- 2、长按发射器【设置键】约10s
- 3、电机停止后10s内按【上行键+停止键】

转速设置：出厂前默认第一档，20N电机三档循环调速，40N电机二档切换调速，50N电机无调速。

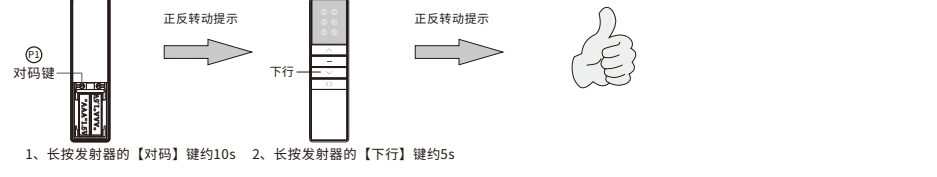


- 1、长按发射器的【对码】键约10s
- 2、长按发射器的【下行】键约5s

复制：为已经对码的电机新增一个B发射器。

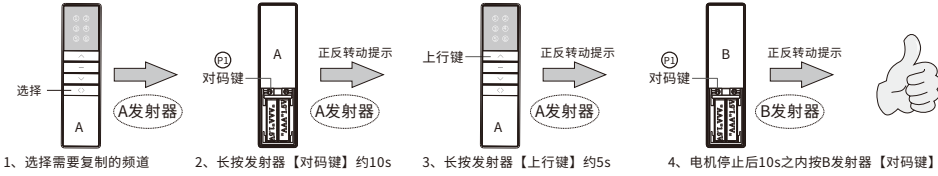


- 1、选择需要复制的频率
- 2、长按发射器【对码键】约10s
- 3、长按发射器【上行键】约5s
- 4、电机停止后10s之内按B发射器【对码键】

换向：切换已对上码电机运转方向。如：换向前，按发射器上行键，窗帘往下运行；换向后，按发射器上行键，窗帘往上运行。

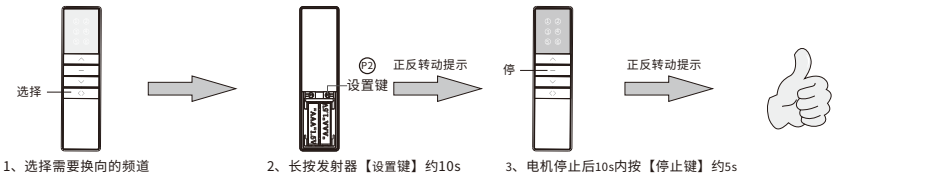


- 1、选择需要换向的频率
- 2、长按发射器【设置键】约10s
- 3、电机停止后10s内按【停止键】约5s


上限位/下限位设置：指按发射器【上行键或下行键】时，窗帘向上/向下运行，所能到达的理想最高/最低位置。

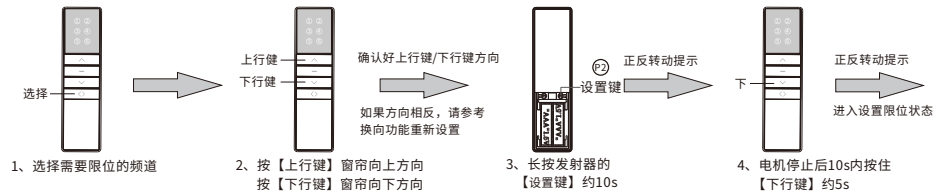

- 1、选择需要限位的频率
- 2、按【上行键】窗帘向上方向按【下行键】窗帘向下方向
- 3、长按发射器的【设置键】约10s
- 4、电机停止后10s内按住【下行键】约5s

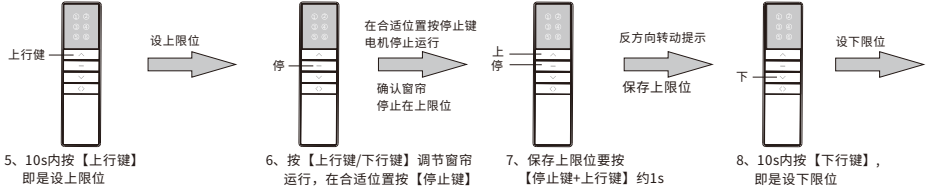


- 5、10s内按【上行键】即是设上限位
- 6、按【上行键/下行键】调节窗帘运行，在合适位置按【停止键】
- 7、保存上限位要按【停止键+上行键】约1s
- 8、10s内按【下行键】，即是设下限位

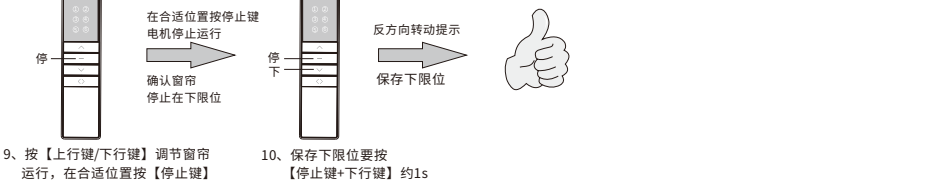


- 9、按【上行键/下行键】调节窗帘运行，在合适位置按【停止键】
- 10、保存下限位要按【停止键+下行键】约1s

第三行程设置：窗帘运行到第三行程，重复操作可删除第三行程。

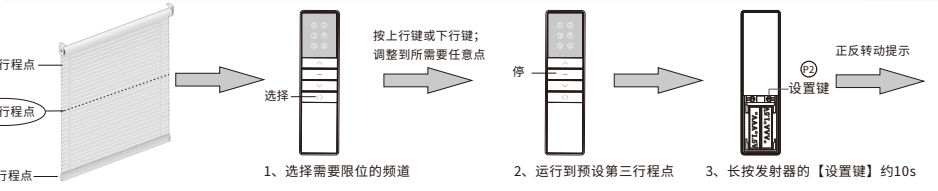


- 1、选择需要限位的频率
- 2、运行到预设第三行程点
- 3、长按发射器的【设置键】约10s

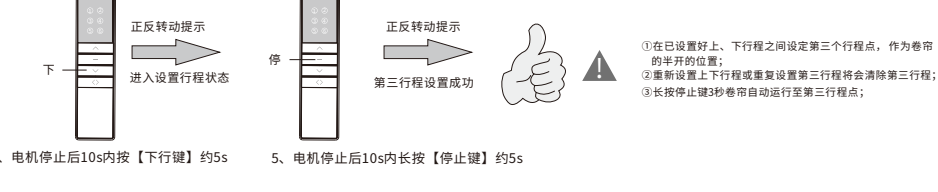

- 4、电机停止后10s内按【下行键】约5s
- 5、电机停止后10s内长按【停止键】约5s

- ①在已设置好上、下行程之间设定第三个行程点，作为卷布的半开的位置；
- ②重新设置上下行程或重复设置第三行程将会清除第三行程；
- ③长按停止键3秒卷布自动运行至第三行程点；

配网重置方法：

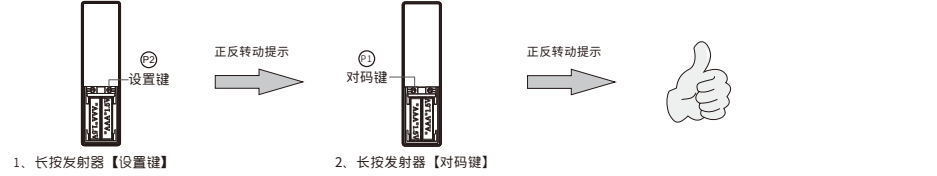


- 1、长按发射器【设置键】
- 2、长按发射器【对码键】

APP配网方法：




- 01.打开智能生活APP，选择右上角的“+”选择“添加设备”
- 02.等待搜索设备
- 03.输入WiFi密码，点击下一步

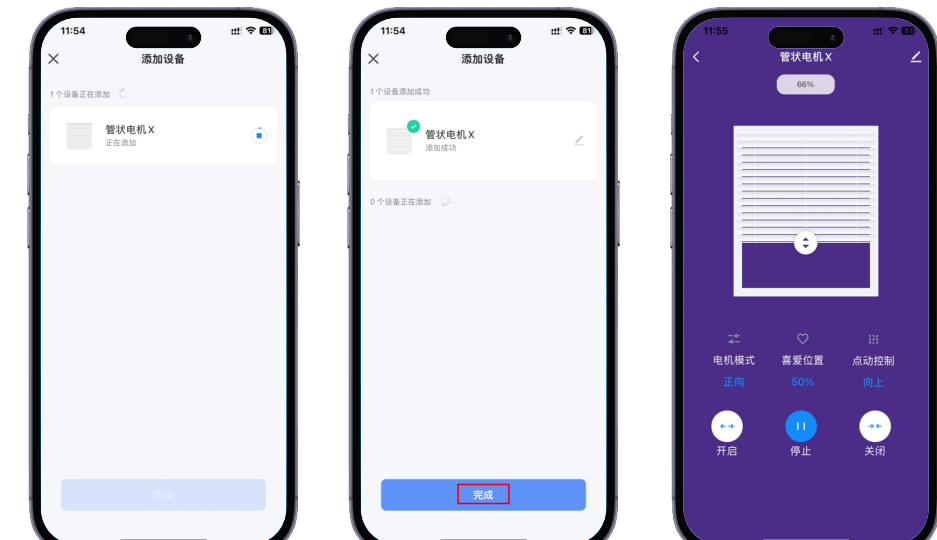

- 04.等待设备连接
- 05.添加成功，点击完成
- 06.最终操作界面上图所示

Company reserves the right to change product design and specifications without prior notice then, photos are for reference only. H12357 A/ C

Clear pairing : Clear all pairing on the motor:

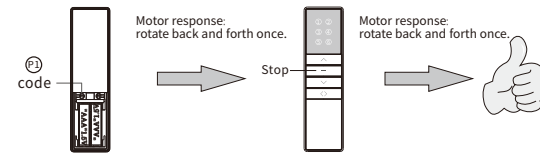

1、Press & Hold **【Code】** button on transmitter about 10s 2、press **【Stop】** button about 5s;

Diagram illustrating the sequence of actions for the 'P1 code' step:

- Initial state: Keypad with 'Select' and 'Down' buttons highlighted.
- Action: Press 'P1 code' (indicated by a circled 'P1' and an arrow).
- Motor response: rotate back and forth once.
- Final state: Keypad with 'Up' and 'Down' buttons highlighted.
- Motor response: rotate back and forth once.
- Result: Success (indicated by a thumbs-up icon).

The diagram illustrates the three steps to pair a channel:

- 1. Select a channel that is already paired**: A hand selects a channel on the transmitter.
- 2. Press & Hold [Set] button on transmitter about 10s;**: The hand presses and holds the [Set] button on the transmitter.
- 3. Within 10s after motor stops, press [Up+Down] button together ;**: The hand presses the [Up] and [Down] buttons together on the receiver.

1. Select the channel that will be interchanged;

2. Press & Hold [Set] button on transmitter about 10s;

Motor response: rotate back and forth once.

3. Within 10s after motor stops, press [Up] button about 5s;

Motor response: rotate back and forth once.

1. Select a channel that is already paired

2. Press & Hold [Set] button on transmitter about 10s;

3. Within 10s after motor stops, press [Up+Stop] button together ;

Motor response: rotate back and forth once.

Motor response: rotate back and forth once.

1. Press & Hold [Code] button on transmitter about 10s

2. Press & Hold [Down] button on transmitter about 5s

The diagram illustrates the three-step process of a remote control:

- Select:** A hand selects a channel (A) from a list. This action sends a **code** (A) to the transmitter.
- Motor response:** The transmitter sends a signal to the receiver, which responds by rotating back and forth once. This action sends a **code** (A) to the transmitter.
- Motor response:** The transmitter sends a signal to the receiver, which responds by rotating back and forth once. This action sends a **code** (B) to the transmitter, resulting in a thumbs up gesture.

Reset direction : reset motor direction. Such as: before reset, press transmitter up button, blinds run down. After reset, press transmitter up button, blinds run up.

Motor response: rotate back and forth once.

Motor response: rotate back and forth once.

The diagram illustrates the steps to set the direction of the motor. It shows a sequence of four states of a remote control and a motor unit.

- 1. Select a channel that is already be paired**: The remote control is shown with the 'Select' button highlighted.
- 2. Press up button, blinds up. Press down button, blinds down;**: The remote control is shown with the '[Up] button' and '[Down] button' highlighted. The motor unit is shown with the text 'Confirm direction' and 'If direction is not logical, please reset direction according "Reset direction" steps.'
- 3. Press & Hold [Set] button on4. Within 10s after motor stops, transmitter about 10s;**: The remote control is shown with the 'Set' button highlighted. The motor unit is shown with the text 'Motor response: rotate back and forth once.'
- Now you can start to adjust limits**: The remote control is shown with the '[Down] button' highlighted. The motor unit is shown with the text 'Motor response: rotate back and forth once.'

5. Within 10s press **[Up]** button to adjust up limit;

6. Press **[Up/Down]** button to move blinds, and then stop blinds at the appointed position;

7. Press & hold **[Stop + Up]** about 1s to save up limit;

8. Within 10s press **[Down]** button to adjust down limit ;

9. Press [Up/Down] button to move blinds, and then stop blinds at the appointed position.

10. Press & hold [Stop + Down] about 1s to save down limit;

Up limit position

Third limit position

Down limit position

Select

Press (up/down) button to move blinds, and then stop blinds at the appointed position

Stop

Motor response: rotate back and forth once.

② set

1. Select a channel that is already be paired

2. Blinds moves to the third limit position;

3. Press & Hold **[Set]** button on transmitter about 10s

Down

Motor response: Rotate back and forth once

Stop

Motor response: Rotate back and forth once

Successful to set the third limits

① Set the third position between up limit and down limit

② Reset up limit or down limit, or repeat third position setting steps will delete the third position

③ Press & Hold **[stop]** button about 3s, blinds will move to the third position.

4. Within 10s after motor stops, press **[Down]** button about 5s;

5. Within 10s after motor stops, press **[Stop]** button about 5s;

Motor response: rotate back and forth once.

code

Motor rotate back and forth

2、Press & hold **【Code】** button

11:57

Add Device

Searching for nearby devices. Make sure your device has entered [pairing mode](#).

Tubular motor

Tap a device icon to add the device

Add Manually

Electrical

Lighting

Sensors

Large Home

Plug (BLE+Wi-Fi)

Socket (Wi-Fi)

Socket (Zigbee)

11:58


Enter Wi-Fi Information

Choose Wi-Fi and enter password

***** 2.4G

Next

03.Input Wi-Fi name and password,
then click “next”

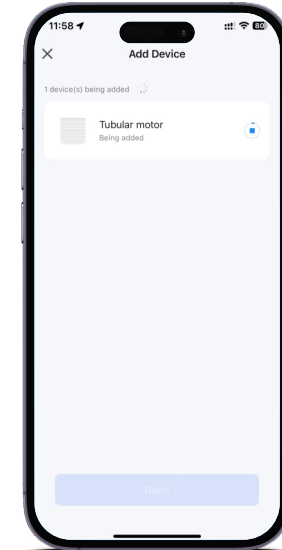

11:58

×

Add Device

1 device(s) added successfully



Tubular motor
Added successfully

0 device(s) being added

Done

06.Operation interface